



Dell Chromebook Wi-Fi and navigation guide

1. Connect the power adapter and charge the Dell Chromebook at least 2 hours before 1st use.
****NOTE** The Chromebook lid should remain closed while charging or when not in use.**
2. Opening the Chromebook lid will turn it on automatically.
3. It will take 5 to 15 seconds for the Chromebook to wake up before you see the login screen.
****NOTE** The power button may be used if the Chromebook does not turn on when the lid is opened.**
4. Connect to your Wi-Fi network before attempting to log into the Chromebook. *(See below)*

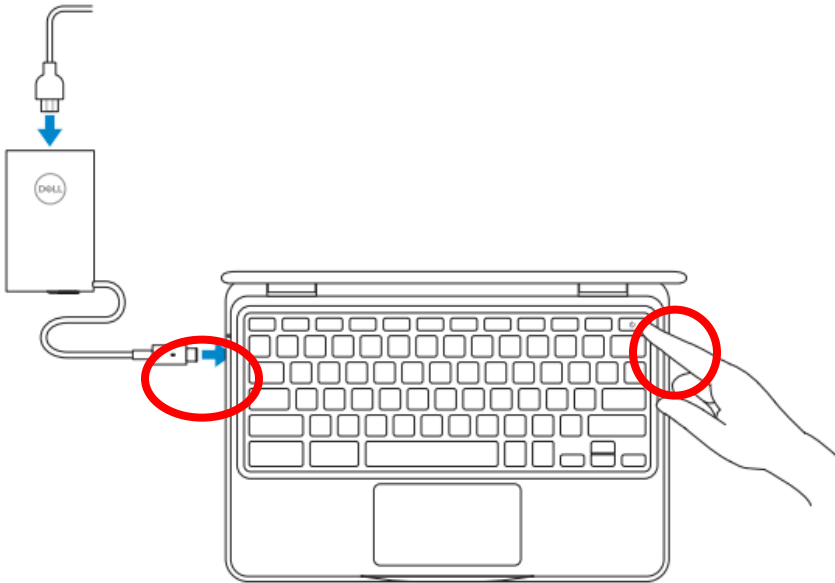


Features

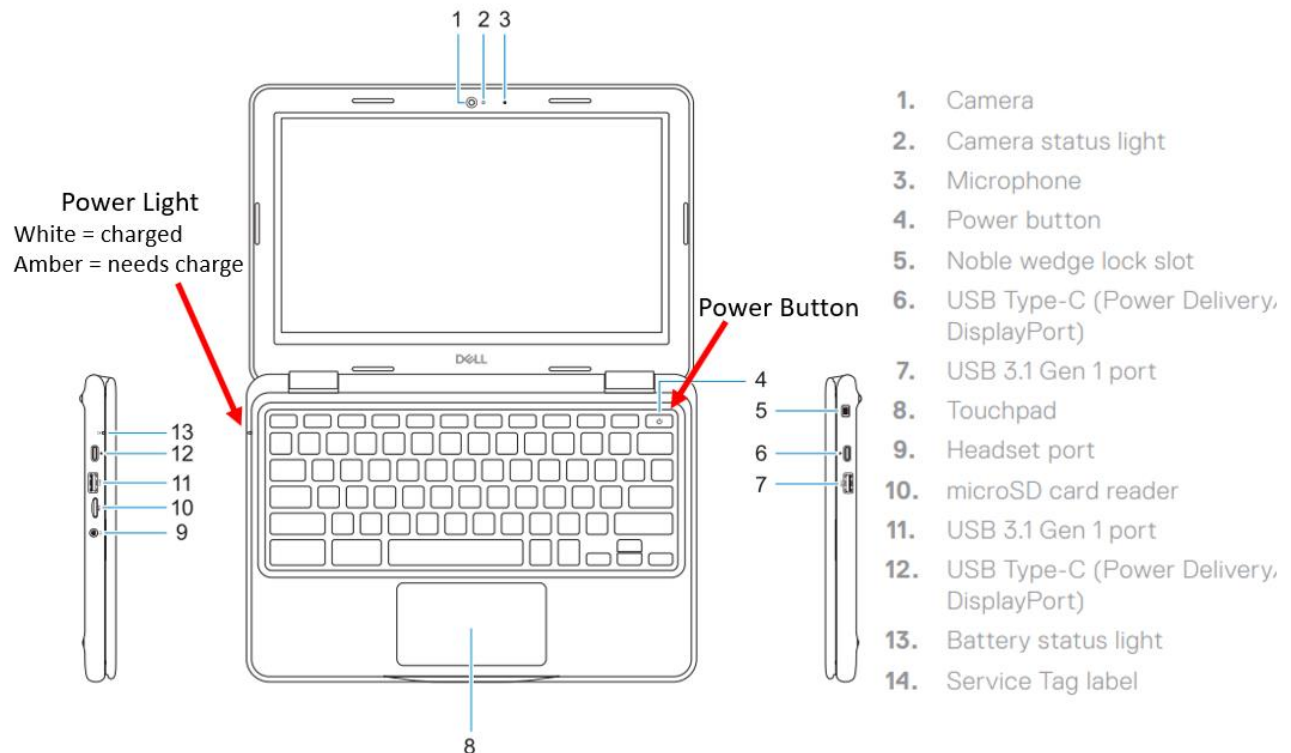


Joining Chromebooks to Wi-Fi


1. Click the time in the bottom right.

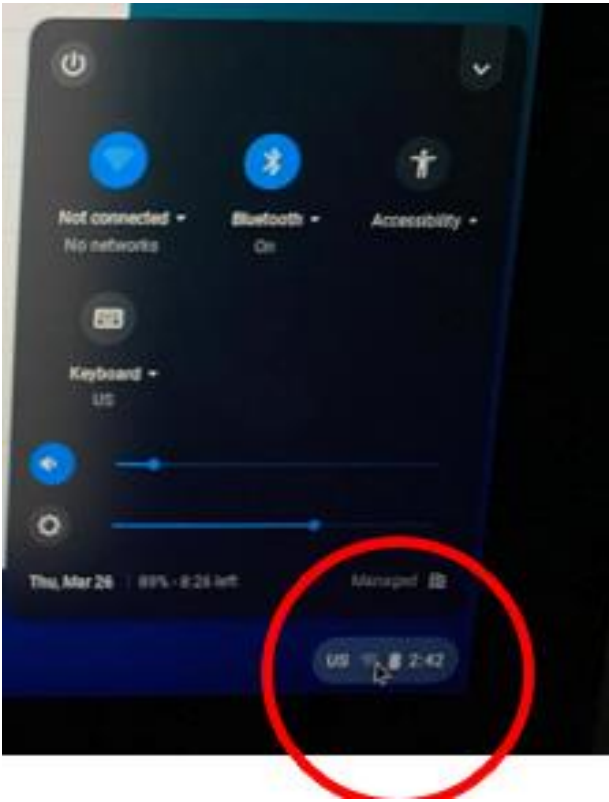


2. Click the Wi-Fi Logo

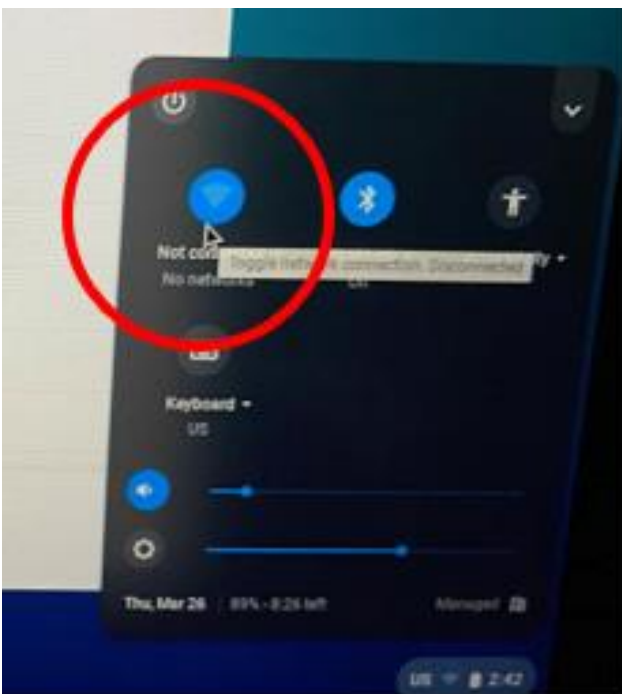


3. You can then select your Wi-Fi Network

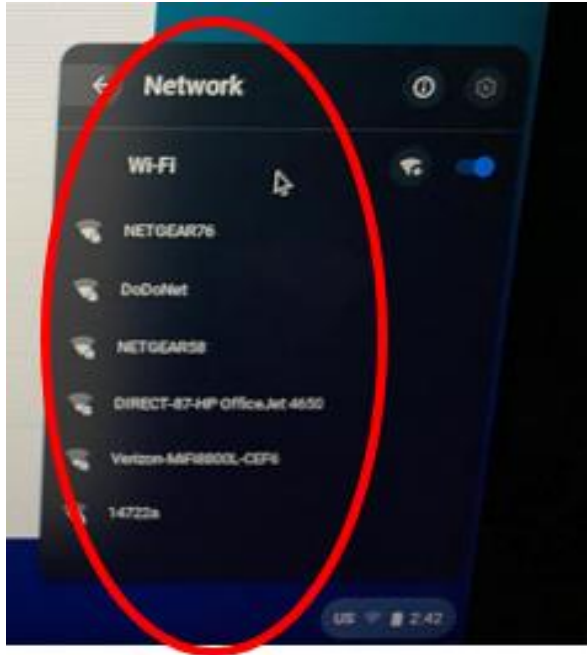

4. Enter in your password, and choose Connect in the lower right-hand corner

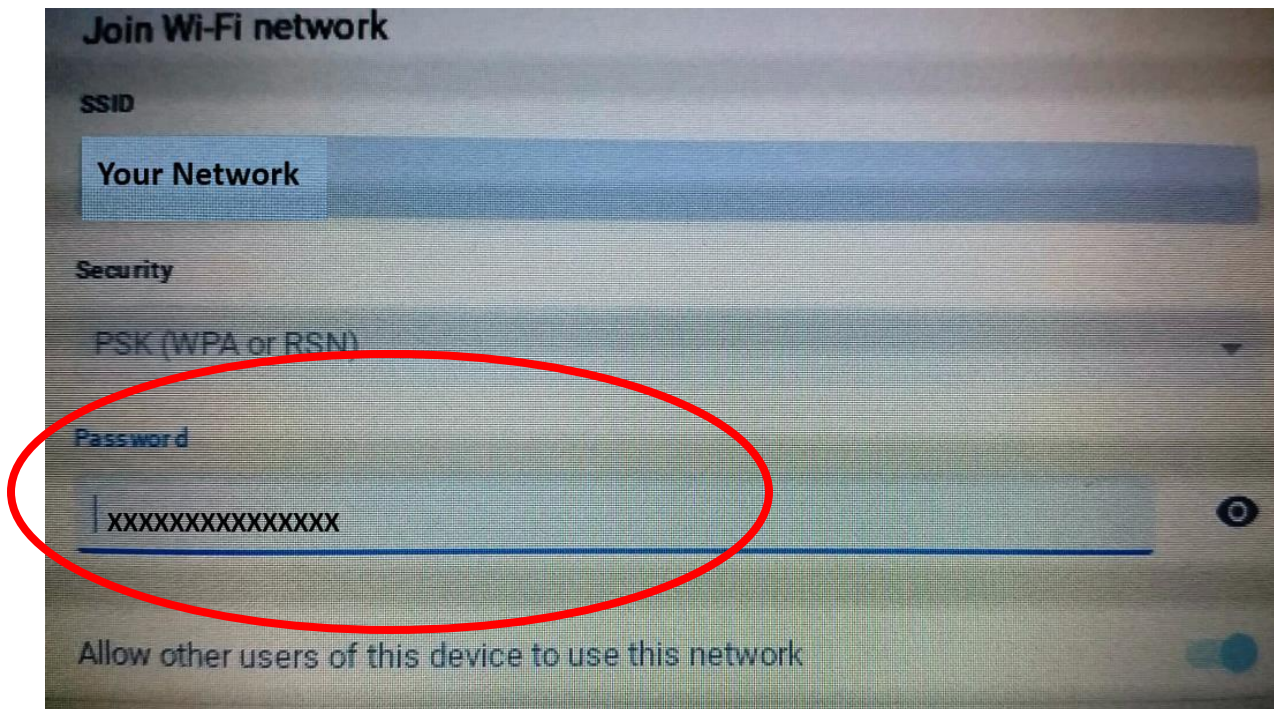

5. You see the familiar login screen as you would using the Chromebook at the school. Enter your account information and press enter

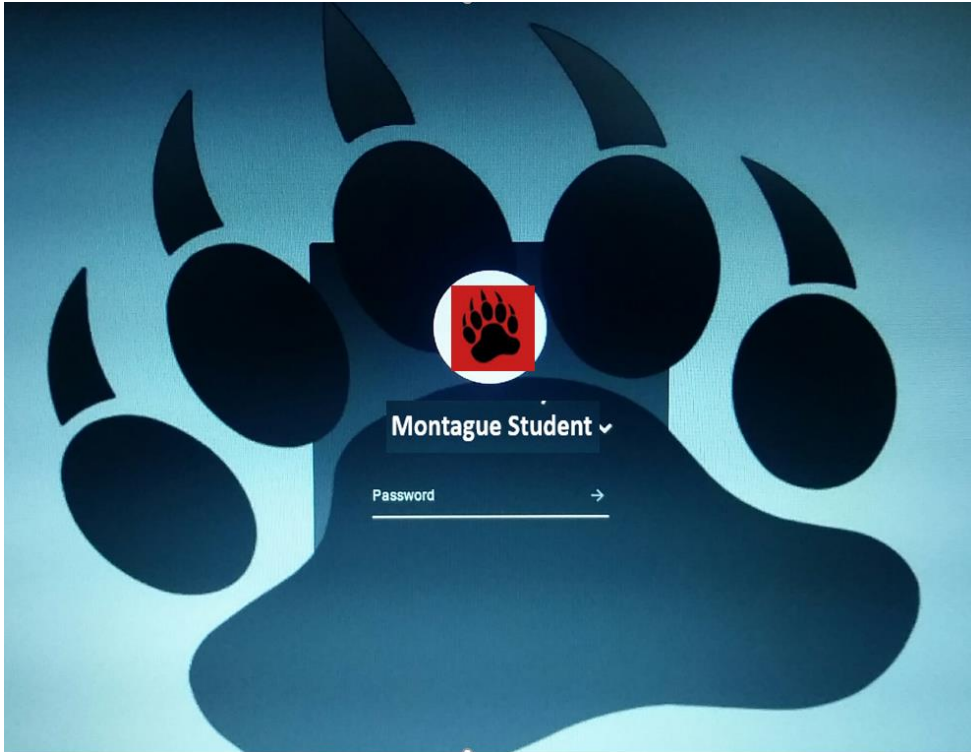

Connection Tips

- In some cases, your wi-fi name and password may be on the bottom of your internet router.
- Your Internet Provider might be able to help you get this info.

If you have Chromebook related issues, email the address below with the following:

- Your Name
- Your contact information
- Name of your child
- A description of the issues you are experiencing along with the steps you took to try and correct the issue.

Chromebook Support E-mail address: chromebooksupport@montagueschool.org

*****NOTE** Any questions related to Google classroom, other online accounts or lessons should be directed to your child's teacher***